HOME
DECORATORS
C O L L E C T I O N

BF-25135 KIDS TOY STORAGE HALL TREE 60″HX42″W

INV#16275

ASSEMBLY INSTRUCTIONS

Made In China

THIS ITEM MUST BE ASSEMBLED BY AN ADULT

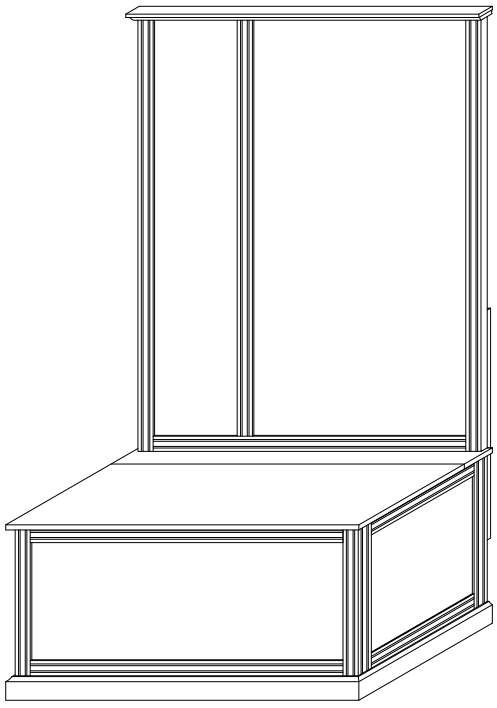

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A PANEL-1PC	B 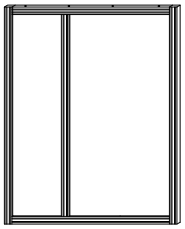 UP BACK PANEL-1PC	C  SMALL TOP PANEL-1PC
D  LARGE TOP PANEL-1PC	E  LEFT SIDE PANEL-1PC	F  RIGHT SIDE PANEL-1PC
G  STAND PANEL-1PC	H  BOTTOM PANEL-1PC	I UP ADORNING PANEL-1PC
J  FRONT PANEL-1PC	K DOWN ADORNING PANEL-1PC	L  BACK PANEL-1PC

M PANELS-2PCS	N CAM-TOOL-1PC	O  CAM-BOLTS-32PCS
P CAM-LOCKS-32PCS	Q DOWELS-10PCS	R 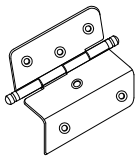 HINGES-3PCS
S 6mm × 1/2" SCREWS-26PCS	T  LEFT HARDWARE-1PC	U  RIGHT HARDWARE-1PC
V 11mm × 1-1/4"  BOLTS-4PCS	W 8mm × 1"  SCREWS-12PCS	X 6mm × 3/4" SCREWS-4PCS
Y 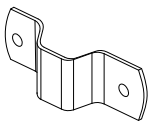 HOOKS-4PCS	Z  GECKOS-4PCS	A1 PLASTIC BELTS-2PCS
B1 7mm × 7/8"  SCREWS-4PCS	C1 ALLEN WRENCH-1PC	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

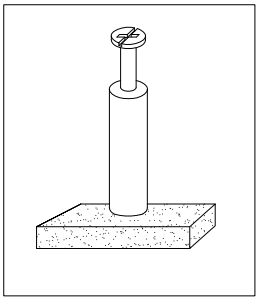

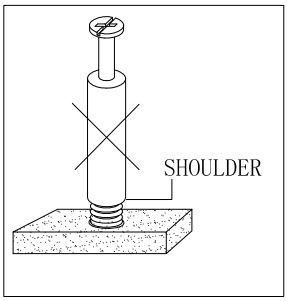

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

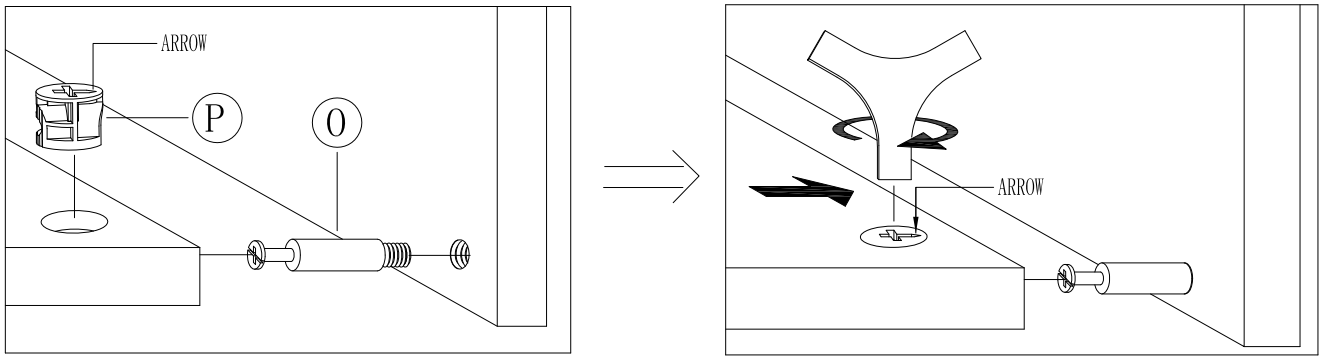

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

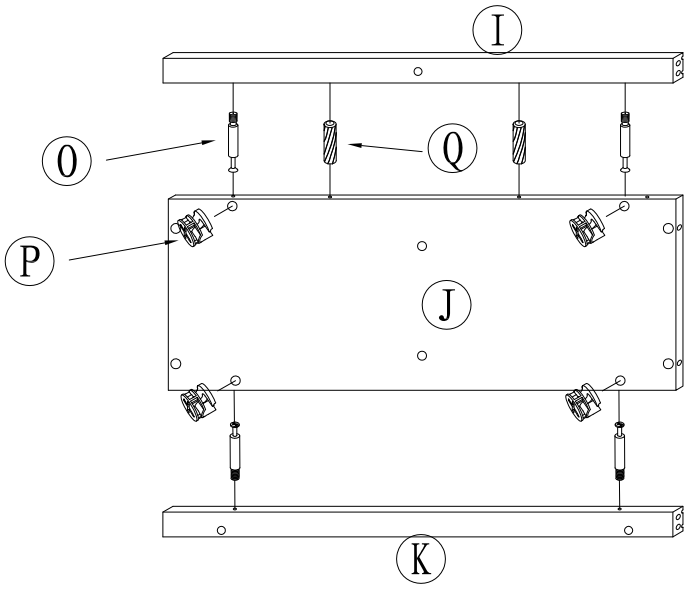

1). ASSEMBLE THE FRONT PANEL(J).

- ROTATE 2 CAM-BOLTS(O) AND INSERT 2 DOWELS(Q) INTO THE HOLES IN THE UP ADORNING PANEL(I).
- ROTATE 2 CAM-BOLTS(O) INTO THE HOLES IN THE DOWN ADORNING PANEL(K).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE FRONT PANEL(J) AND ATTACH USING 4 CAM-LOCKS(P).

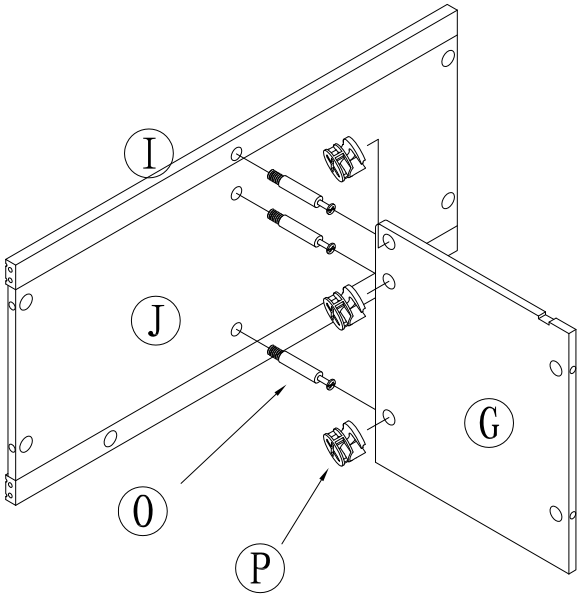

2). ASSEMBLE THE STAND PANEL(G).

- ROTATE 3 CAM-BOLTS(O) INTO THE HOLES IN THE PANEL(I/J).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE STAND PANEL(G) AND ATTACH USING 3 CAM-LOCKS(P).

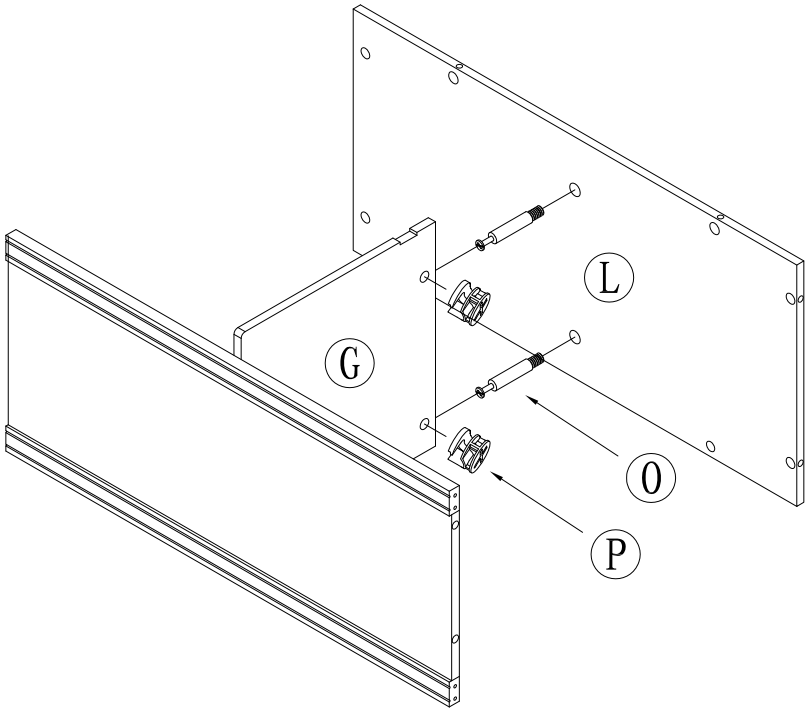

3). ASSEMBLE THE BACK PANEL(L).

- ROTATE 2 CAM-BOLTS(O) INTO THE HOLES IN THE BACK PANEL(L).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE STAND PANEL(G) AND ATTACH USING 2 CAM-LOCKS(P).

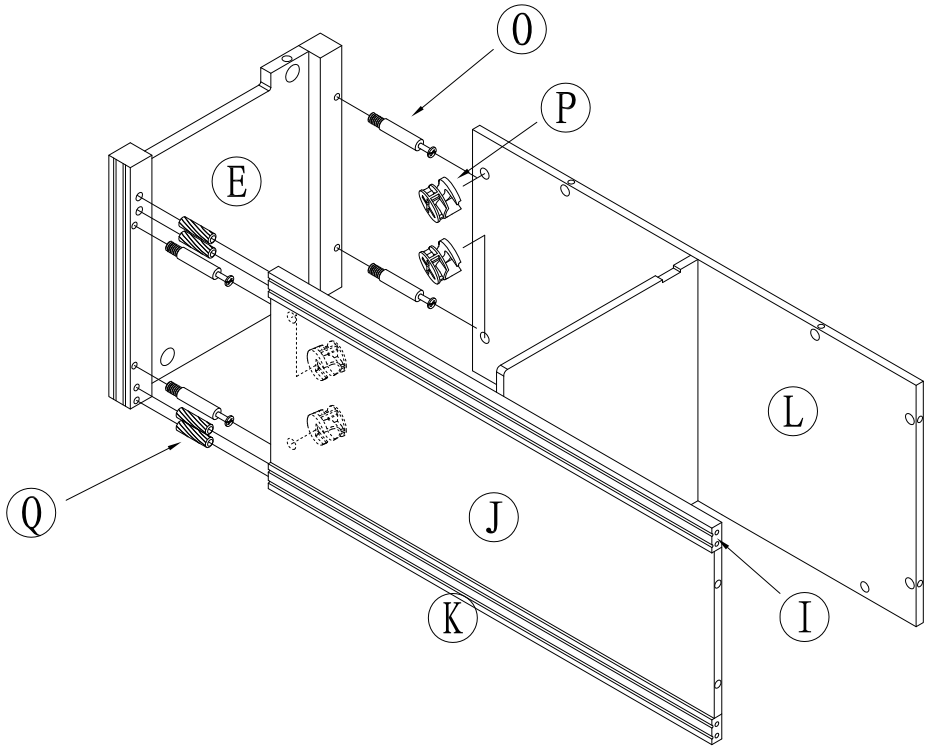

4). ASSEMBLE THE LEFT SIDE PANEL(E).

- ROTATE 4 CAM-BOLTS(O) AND INSERT 4 DOWELS(Q) INTO THE HOLES IN THE LEFT SIDE PANEL(E).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE PANEL(J/L) AND ATTACH USING 4 CAM-LOCKS(P).

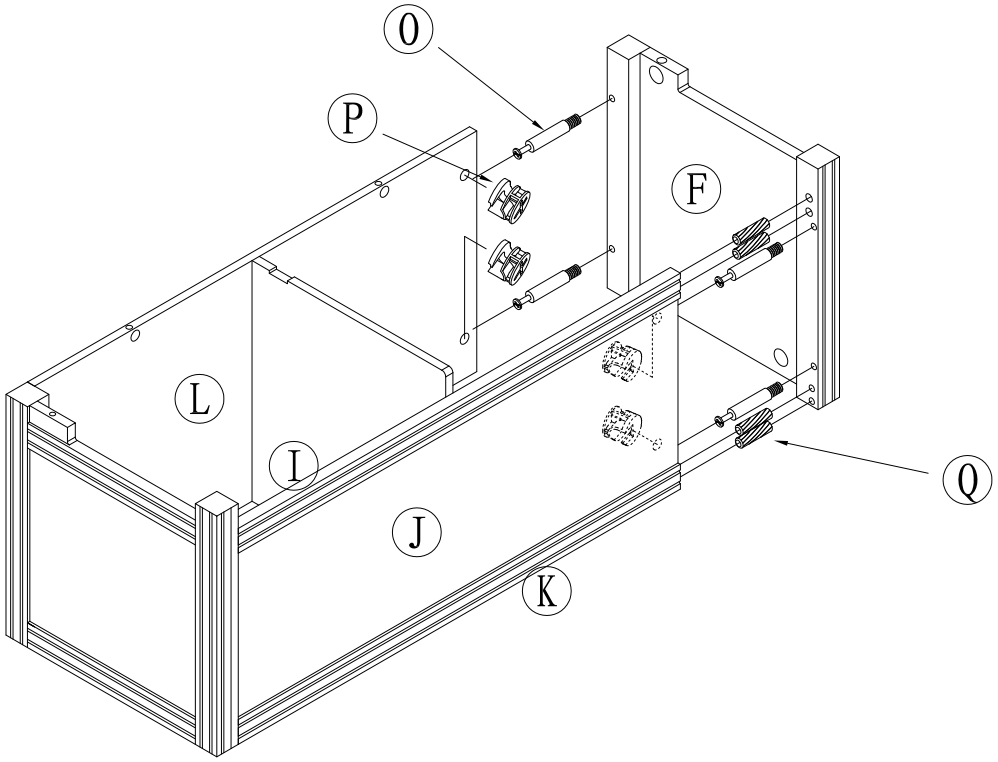

5). ASSEMBLE THE RIGHT PANEL(F).

- ROTATE 4 CAM-BOLTS(O) AND INSERT 4 DOWELS(Q) INTO THE HOLES IN THE RIGHT SIDE PANEL(F).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE PANEL(J/L) AND ATTACH USING 4 CAM-LOCKS(P).

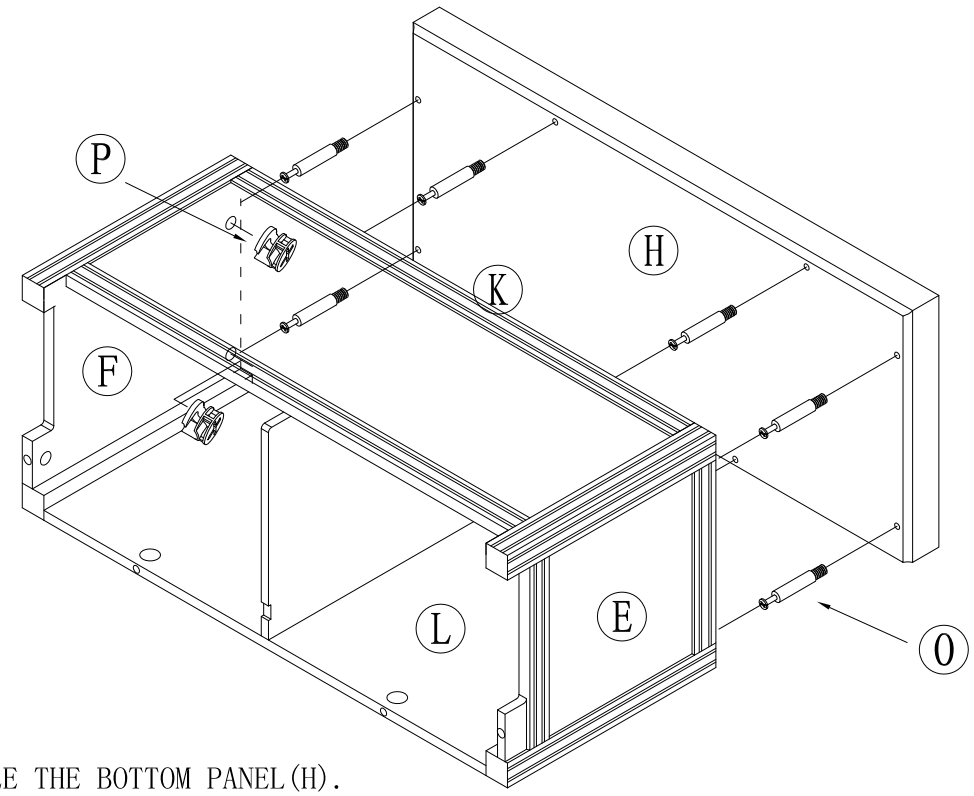

6). ASSEMBLE THE BOTTOM PANEL(H).

- ROTATE 8 CAM-BOLTS(O) INTO THE HOLES IN THE BOTTOM PANEL(H).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE PANEL(E/F/K/L) AND ATTACH USING 8 CAM-LOCKS(P).

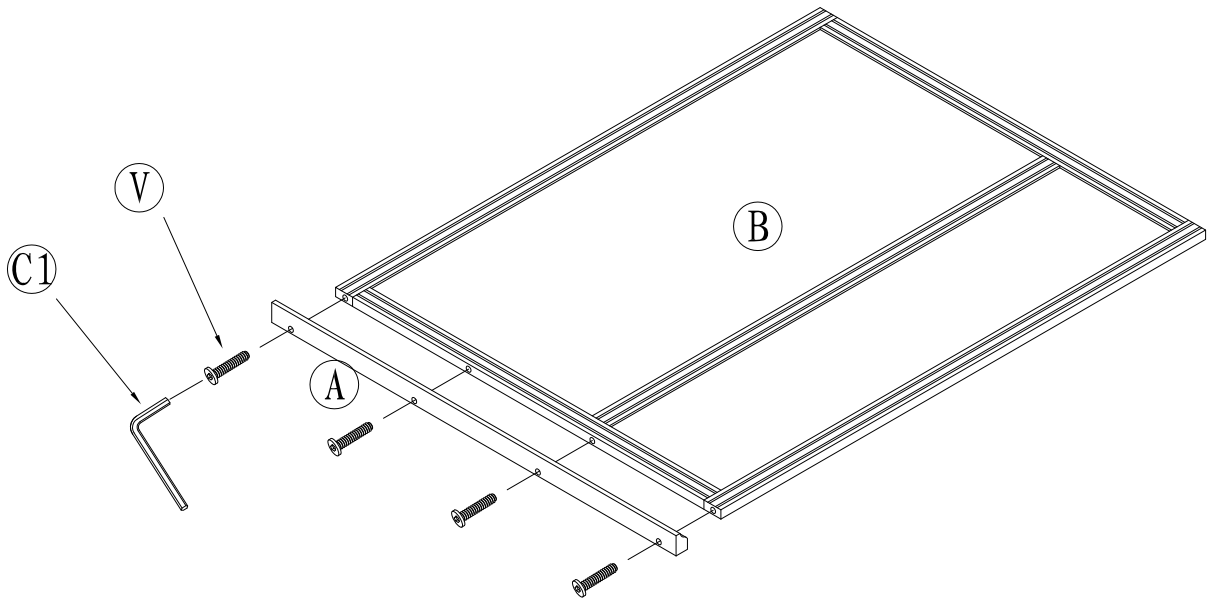

7). ASSEMBLE THE PANEL(A).

- ATTACH THE PANEL(A) TO UP BACK PANEL(B) USING 4 BOLTS(V).

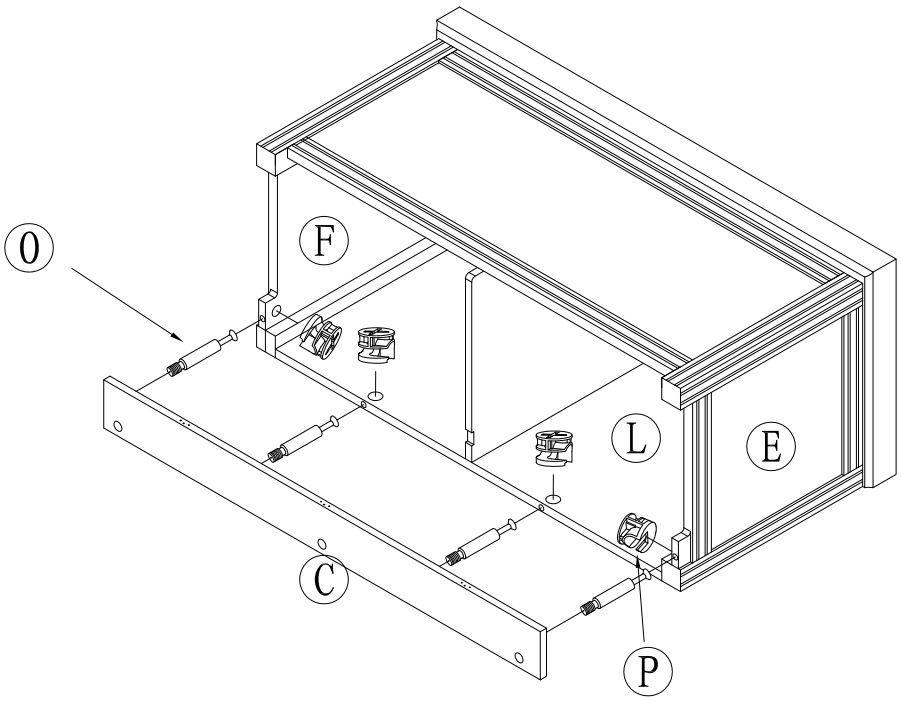

8). ASSEMBLE THE SMALL TOP PANEL(C).

- ROTATE 4 CAM-BOLTS(O) INTO THE HOLES IN THE SMALL TOP PANEL(C).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE PANEL(E/F/L) AND ATTACH USING 4 CAM-LOCKS(P).

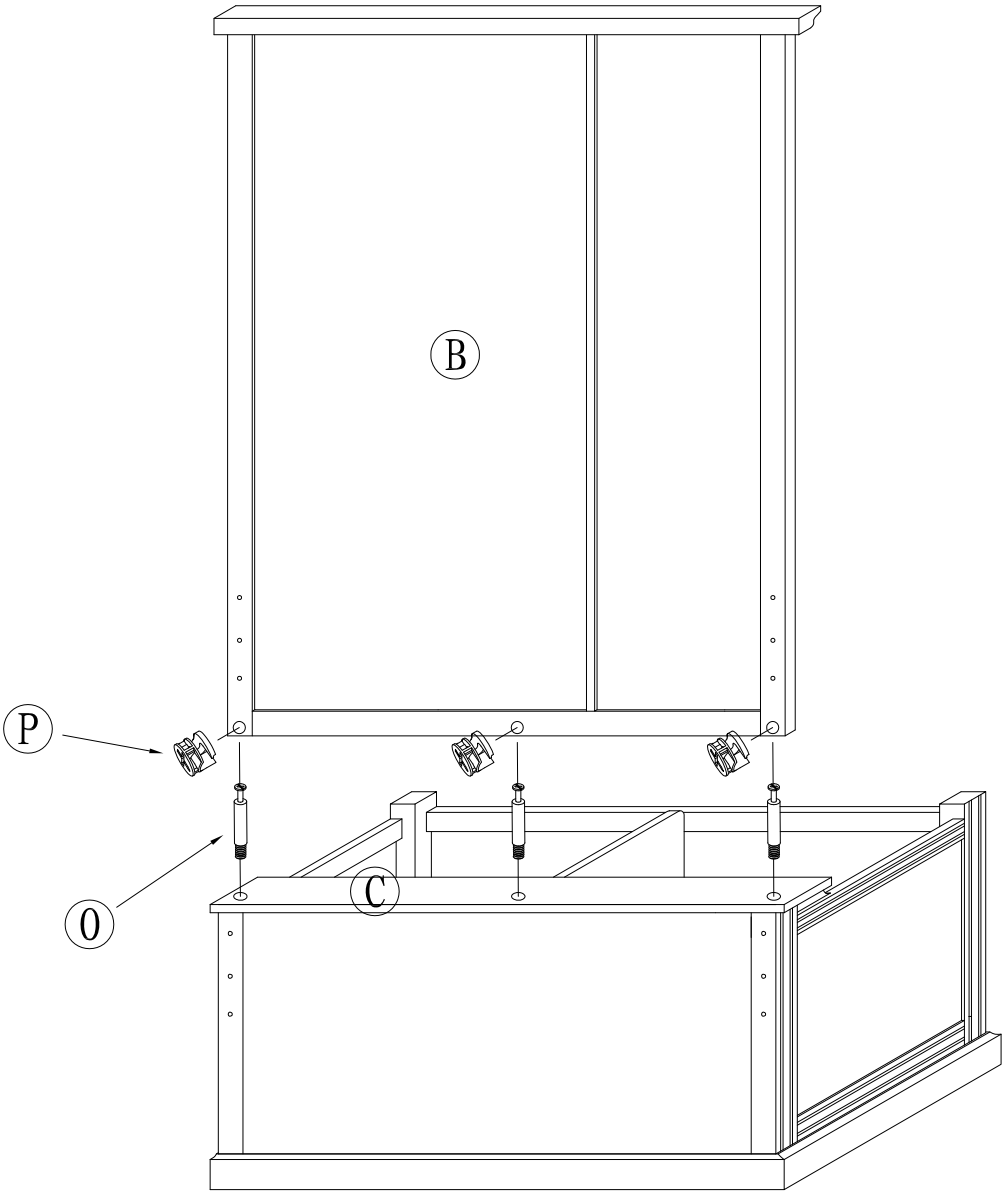

9). ASSEMBLE THE UP BACK PANEL(B).

- ROTATE 3 CAM-BOLTS(O) INTO THE HOLES IN THE SMALL TOP PANEL(C).
- PLACE CAM-BOLTS(O) INTO THE HOLES IN THE UP BACK PANEL(B) AND ATTACH USING 3 CAM-LOCKS(P).

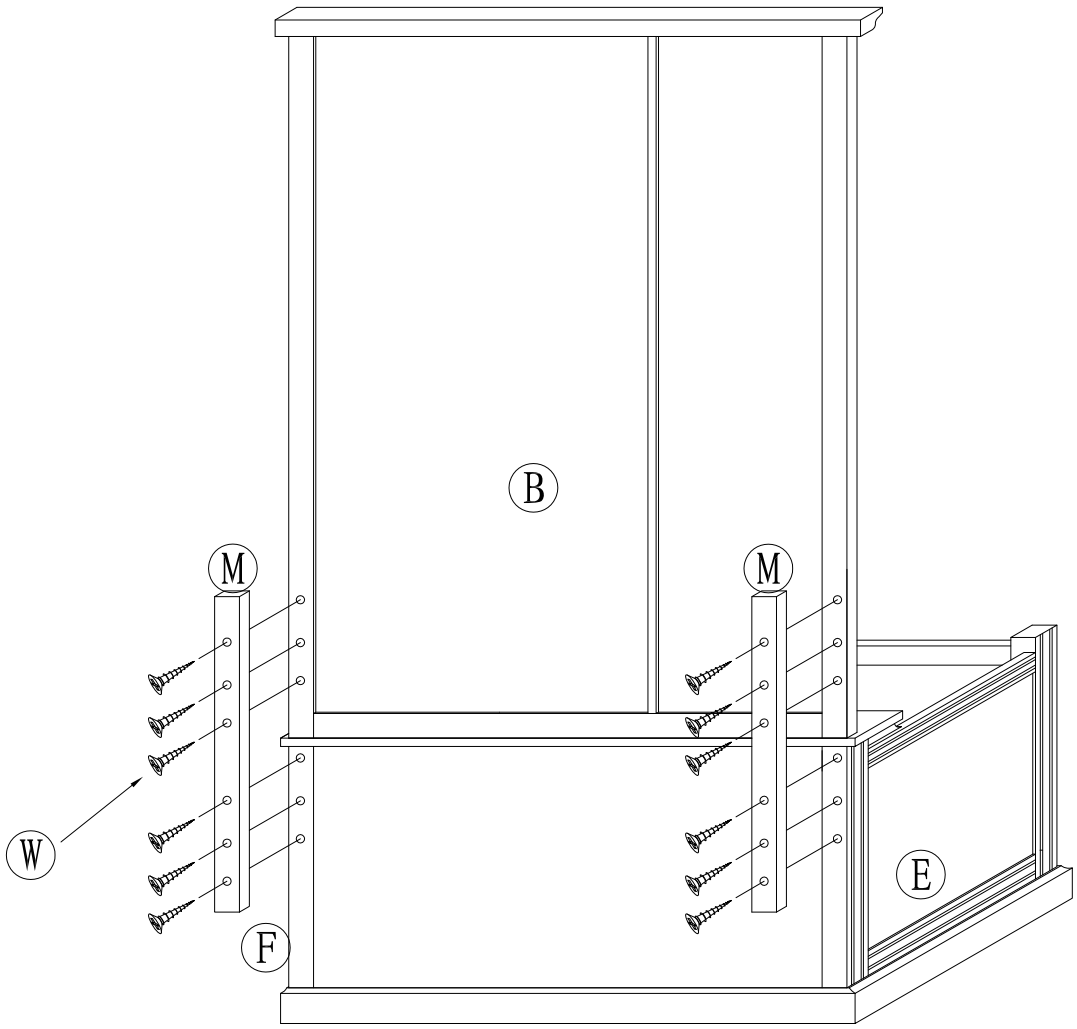

10). ASSEMBLE THE PANEL(M).

- ATTACH THE PANEL(M) TO PANEL(B/E) USING 6 SCREWS(W).
- ATTACH THE PANEL(M) TO PANEL(B/F) USING 6 SCREWS(W).

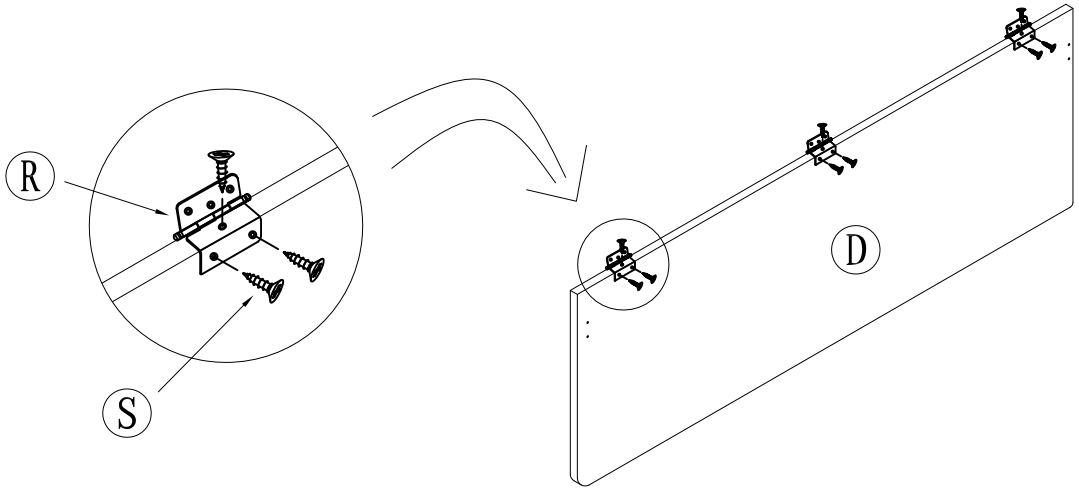

11). ASSEMBLE THE HINGES(R).

- ATTACH 3 HINGES(R) TO LARGE TOP PANEL(D) USING 9 SCREWS(S).

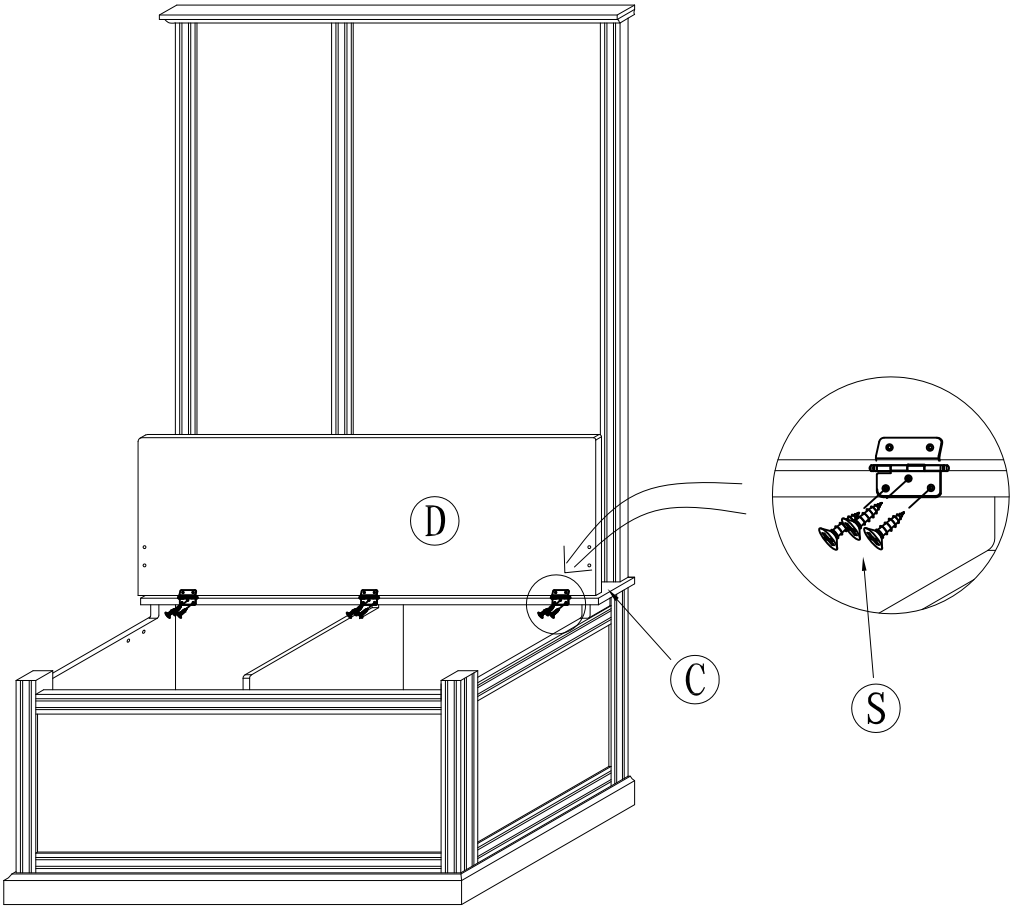

12). ASSEMBLE THE LARGE TOP PANEL(D).

- ATTACH THE LARGE TOP PANEL(D) TO SMALL TOP PANEL(C) USING 9 SCREWS(S).

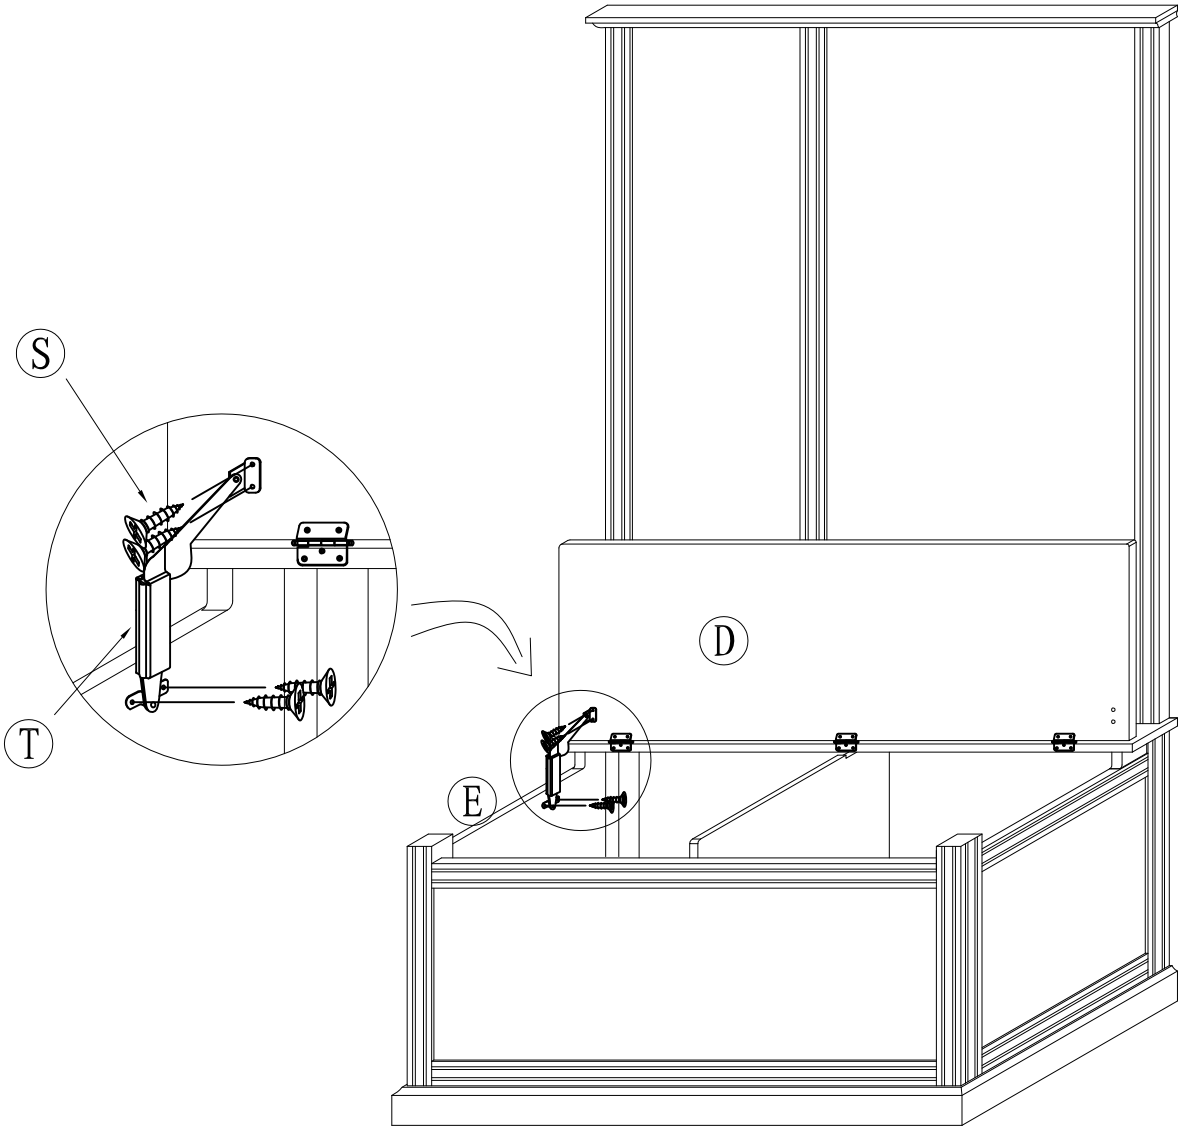

13). ASSEMBLE THE LEFT HARDWARE(T).

- ATTACH THE LEFT HARDWARE(T) TO PANEL(D/E) USING 4 SCREWS(S).

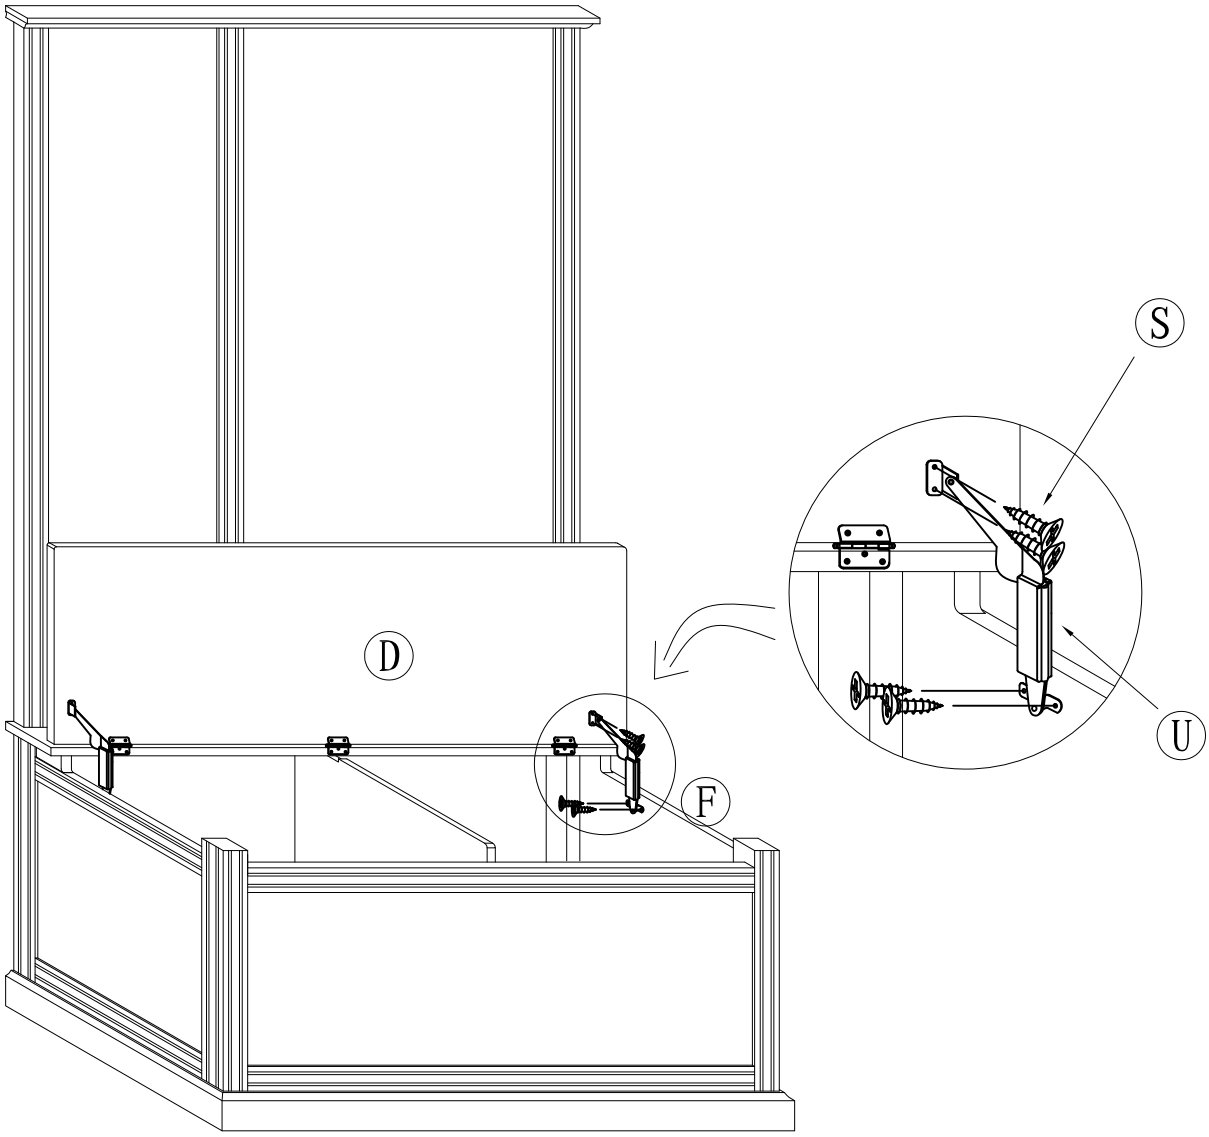

14). ASSEMBLE THE RIGHT HARDWARE(U).

- ATTACH THE RIGHT HARDWARE(U) TO PANEL(D/F) USING 4 SCREWS(S).

Warning

The anti-tip hardware must be used as part of assembly!

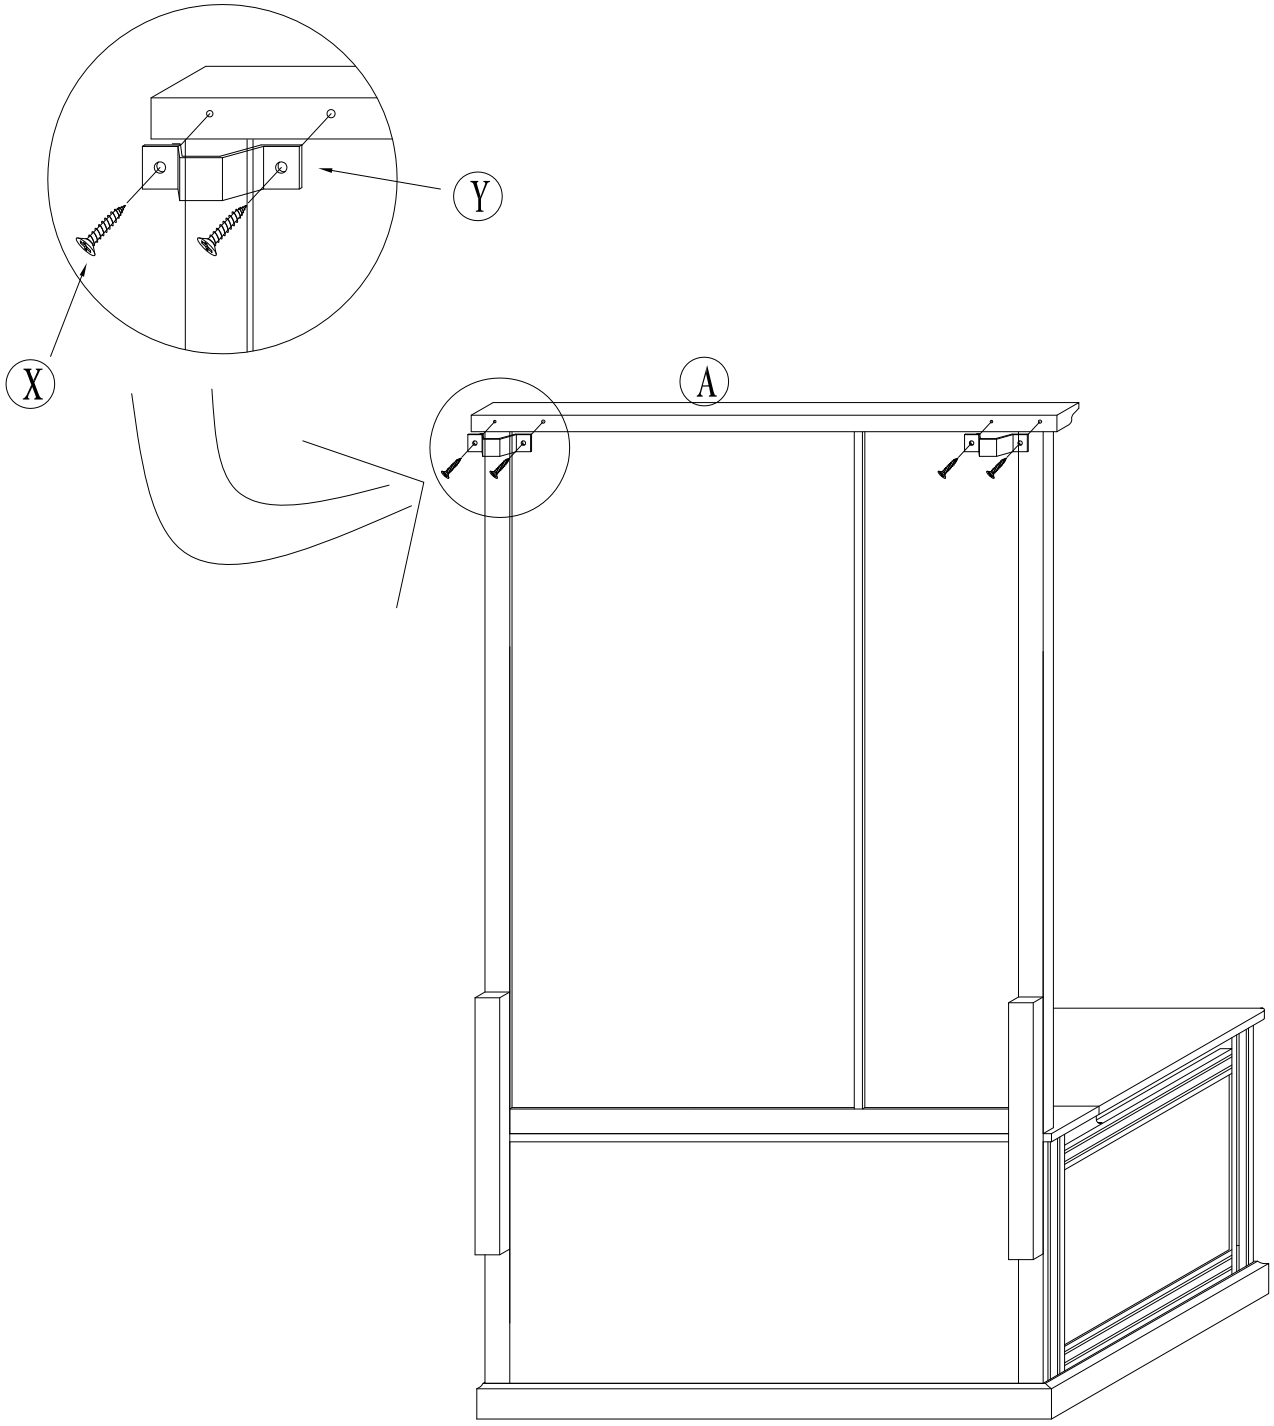

15). ASSEMBLE THE HOOKS(Y).

- ATTACH 2 HOOKS(Y) TO PANEL(A) USING 4 SCREWS(X).

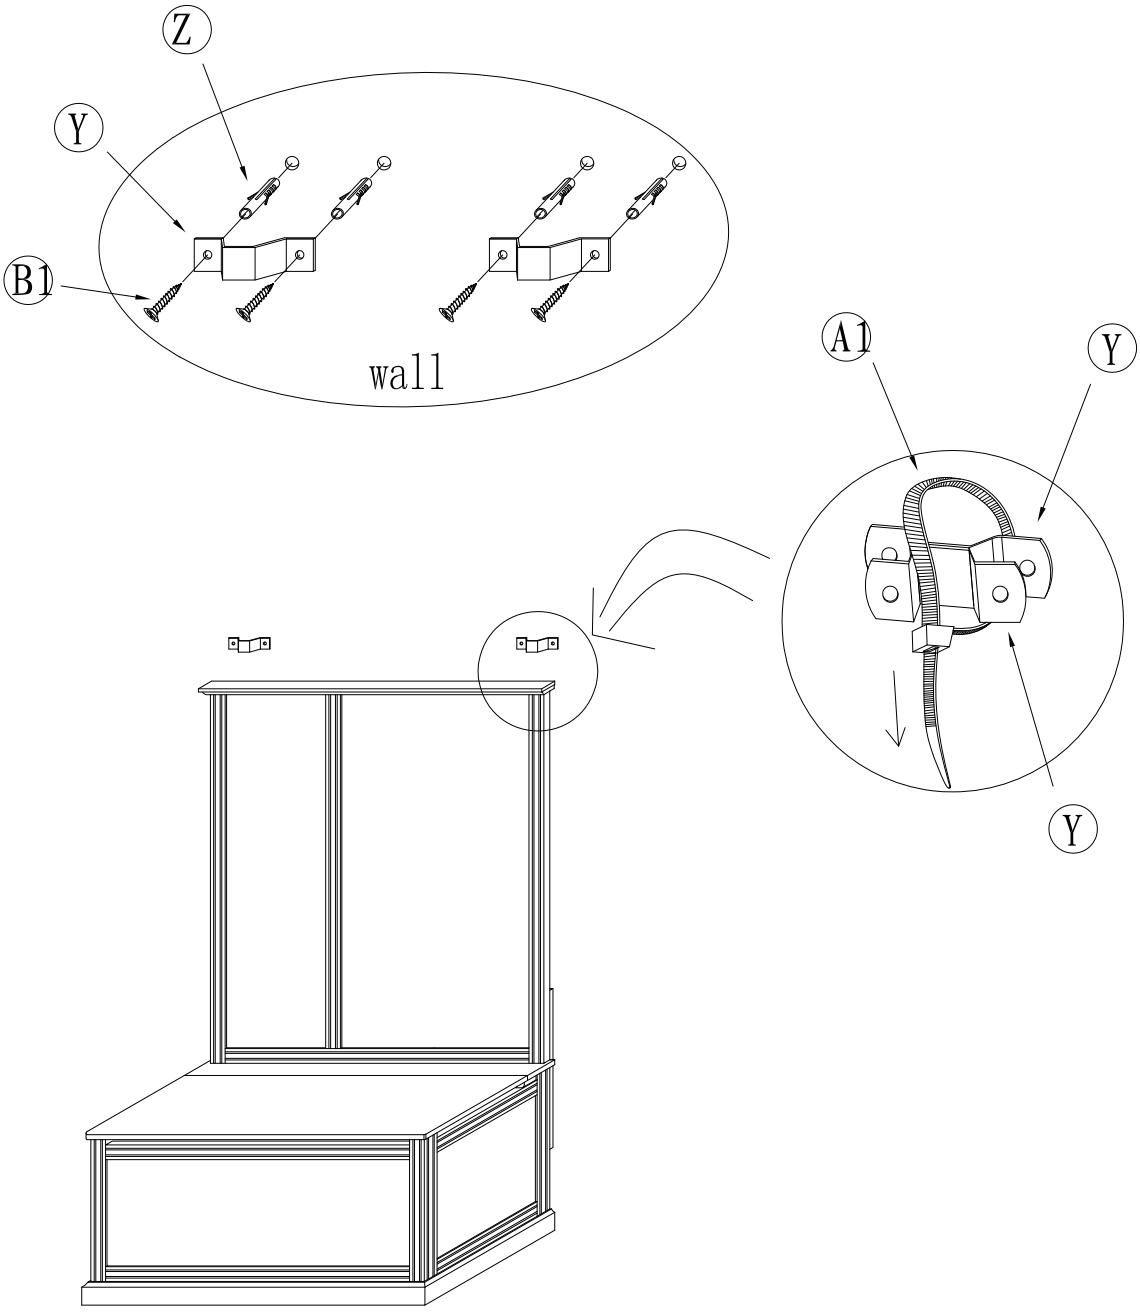

16). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(Z) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(B1) INTO THE GECKOS(Z).
- CONNECT THE TWO HOOKS(Y) WITH A PLASTIC BELT(A1).